



SpecFive Ranger

User Guide

Thank you for ordering your SpecFive Ranger from SpecFive. Here are the instructions to get you connected to your new device and join the mesh.



Button/Switch Configuration:

Power Switch:

- Power on:
 - Toggle oriented away from antenna
- Power off:
 - Toggle oriented towards antenna

Trackball:

- Scrolls through screens
- Note: Press and hold for three seconds while flipping the power switch on to enter DFU mode

Reset Button

- Single short press with device powered on:
 - Reboots device
- Keyboard:
 - Begin typing to draft a message
 - Press Enter to send a message

Shortcuts:

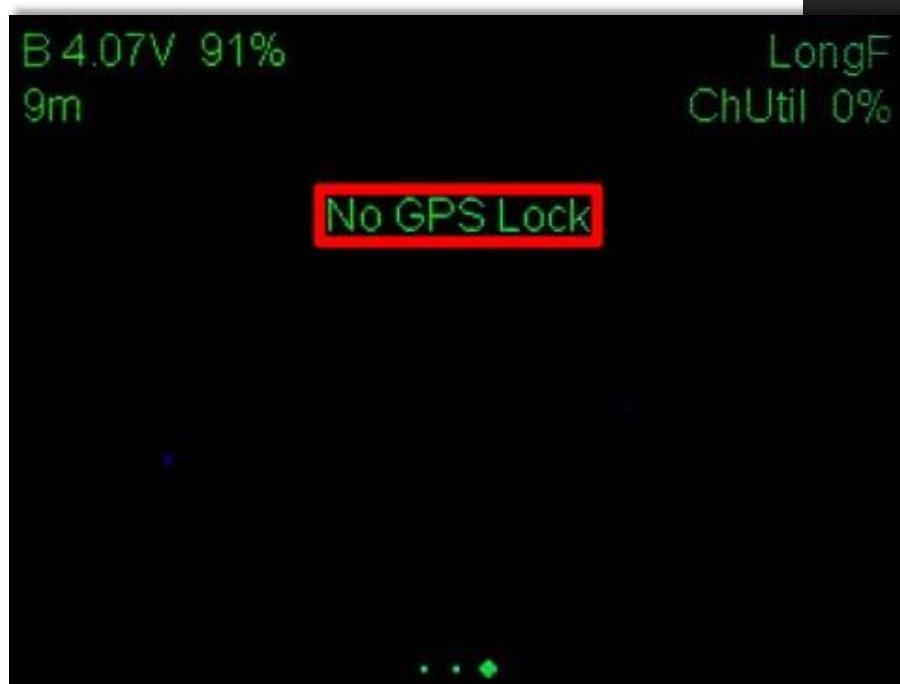
Shortcut	Function
alt & B	Toggle keyboard backlight on/off.
alt & C	Toggle modifier function. Fn displayed on screen.
alt & C + M	Disable/Enable notifications.
alt & C + Q	Quit/Cancel (message, canned message, etc.)
alt & C + T	Tab Key (select channel/dm recipient)
alt & C + I	Decrease screen brightness.
alt & C + O	Increase screen brightness.
alt & C + G	Toggle GPS
alt & C + _	Send network ping.

Screen Messages:

- “Fn” Displayed on the screen



- GPS is enabled but location has not been found:



- GPS is disabled:



- Selector for message recipient activated



Charging the Device:

- Charging icon should appear in the upper left corner of the screen, shown below, to indicate that the device is powered via usb:

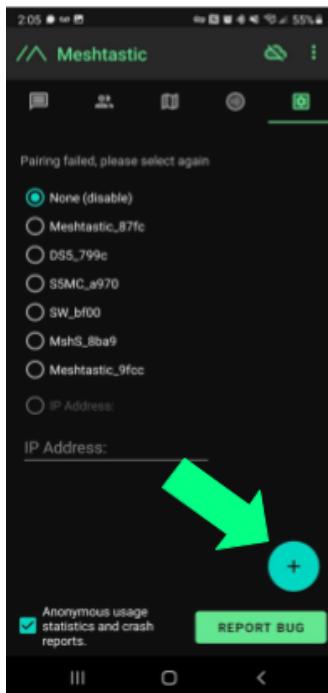
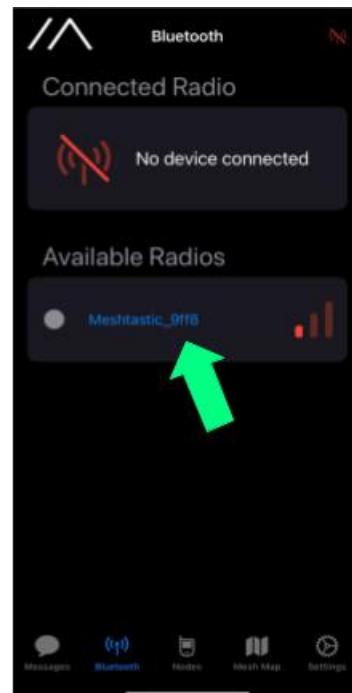
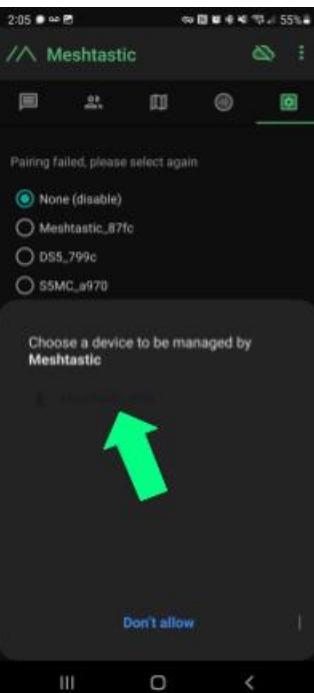
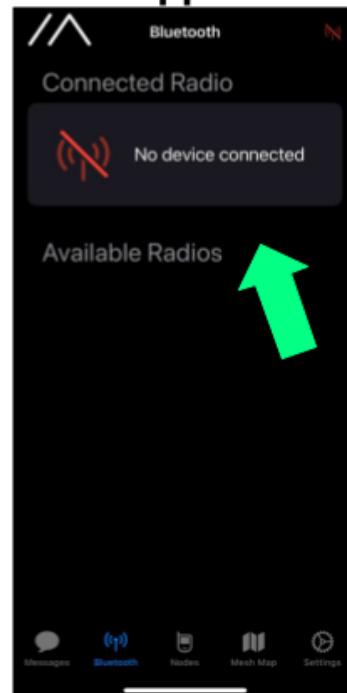


Connecting to the Device via the Meshtastic Mobile App:

- Download the Meshtastic App from the Apple App Store or Google Play Store



- Ensure your phone has bluetooth enabled
- Power on the device
- Connect your new device

Android**Apple**

5. Enter the device's pin that is displayed on its screen

You're Good to Go!



Update your device:

1. Plug the device into a desktop with power off
2. Enter DFU Mode (See Button Configuration section)
3. Head to <https://flasher.meshtastic.org/>
4. Select “T-Deck” under the devices drop-down
5. Select your desired firmware and update the device

Other Resources:

- For more information on radio configuration settings, visit <https://meshtastic.org/docs/configuration/>
- For more information about our products, visit specfive.com